

Type of Equipment: Boom Lift

Make: Genie

Model: All models

Year:

Instructions to use the equipment safely:

First Edition

Safety Training

Pre-operation Inspection

Observe And Obey:

Conduct a thorough pre-operation and function test before each work shift.

Immediately tag and remove from service a damaged or malfunctioning machine.

Repair any machine damage or malfunctions before operating machine.

Be sure that all decals are legible and in place.

Be sure that operator's and safety manuals are legible and in the storage box located on the platform.

Check the engine oil, coolant and fuel levels on internal combustion models.

Check battery level on DC models.

Check the following for damage and improperly installed or missing parts:

- Electrical components, wiring, and electrical cables
- Hydraulic hoses, fittings, cylinders, and manifolds
- Fuel and hydraulic tanks
- Drive and turntable motors and torque hubs
- Boom extension cables and wear pads
- Dents or damage to boom
- Tires and wheels
- Engine and related components
- Limit switches, alarms, horns and beacons
- Nuts, bolts and other fasteners
- Platform entry mid-rail/gate
- Cracks in welds or structural components
- Compartment covers are in place and latched
- DC Models: Both battery packs are in place and properly connected.

Perform quarterly (or every 150 hours) and annual machine inspections. Keep records for three years.